



**WELL MASTER**

*Produce more. Spend less.*

# COLLAR STOP

## APPLICATIONS

The Collar Stop (Type "F") is designed to locate in the collar recess of API upset and non-upset tubing. By lowering the stop to the desired depth and lifting upward, the latch spring are tripped allowing the stop arms to expand into the collar recess. Downward jarring on the inner mandrel pushing it down behind the collar stop arms locking them into place in the collar recess.



CSP2000F

## TECHNICAL SPECIFICATIONS

<b>Size</b>	2 3/8"	2 7/8"	3 1/2"
<b>WM Part Number</b>	CSP2000F	CSP2500F	CSP3500F
<b>Fishneck O.D.</b>	1.375"	1.047"	1.500"
<b>Min. I.D.</b>	0.875"	1.125"	1.625"

Well Master has the ability to provide an integrated collar stop and spring to eliminate wire line cost. See Spring Configuration Matrix to build a spring/stop combination.

**Contact Well Master today to find out how we can help optimize your oil and gas well production.**

Call **303.980.0254** | Email [info@wellmaster.com](mailto:info@wellmaster.com) | Visit [www.wellmaster.com](http://www.wellmaster.com)  
16201 Table Mountain Parkway, Suite 100 | Golden, CO 80403 | Fax 303.980.0355

©2023 Well Master Corporation, All rights reserved.